

AIRENCE USB CHANNEL SEQUENCE

PROBLEM:

At first installation the channels in Windows playback devices were numbered correctly from 1-4.

To re-built the studio I had to plug off everything including mixer and the pc.

Now I plugged all in again and the mixer got re-installed.

Now I have channel numbers from 5-8 where 6 is Deck A, 5 is Deck B.

That is a bit confusing. Can I set the channel numbers somewhere?

I also tried a system recovery with a date before the mixer installation with no luck.

I'd like to reset the channels to 1-4.

SOLUTION:

- Go to device manager and delete all the four USB-AUDIO-CODEC devices.
- Unplug the USB cable from the PC
- Reboot the PC
- When system is restarted plug in again the USB cable again.