

MODULE

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Airlab module programming. A more extensive explanation can be found in the manual from page 48 and up.																
Per module (except for the TELCO) Line A, Line B and Mic can be programmed.																
Activated=X: Push Select. LED (aside Cue/Select knob) lights up																
Timerstart Line A																
Timerstart Line B																
Timerstart MIC																
Startpuls general Line A (Telco altijd aan x)	x	x					X	X	X	X	X	X	X	X	X	X
Startpuls general Line B (Telco altijd aan x)	x	x	X				X	X	X	X	X	X	X	X	X	X
Startpuls general MIC																
Start by Fader (Telco altijd uit)							X	X								
Start by ON (Telco altijd aan x)	x	x							X	X	X	X	X	X		
Start by CUE (Telco altijd aan x)	x	x									X	X				
Startcommand pulse (X) or continuesly (Telco is always continues)													X	X		
LineA Rem. Cue																
LineB Rem. Cue																
Mic .Rem. Cue			X	X												
DJ modus					X	X										
Annoucer modus (slechts voor 1 module mogelijk)				X												
Studio modus			X	X	X	X										
On Air 1 Line A																
On Air 1 Line B																
On Air 1 MIC (geel)					X	X										
On Air 2 Line A																
On Air 2 Line B																
On Air 2 MIC (rood)			X	X												
On active when mixer is powered.	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
MIC connected to Line A																
MIC connected to Line B																
Mic . Remote on			X	X												
Line A remote on																
Line B remote on																
Module stays ON when START is used									X	X	X	X	X	X	X	X

Save settings: Go to Master Settings and select Store and push ENTER