

Question: Is it possible to connect one of the Airlab USB channels to a different PC?

Answer: The Airlab DT offers the possibility to connect four USB channels to the internal hub by 4 pin cables.

When you want to connect two of your or extra USB channels to another computer we can deliver separate USB cables with 4 pin connectors.

These cables you can connect straight to the USB connector of your USB channel and be mounted in the spare holes of your connector panel. This way you are able to connect USB channels to your second computer with separate USB cables.

At the channel you can select by jumpers if it has to receive Program or Sub.

The meter and control surface data are forwarded through the Main USB cable but can be shared in your computer network.

