



AIRCAST + AIRLITE Quickstart

1. Open Aircast en go to **Control Panel**

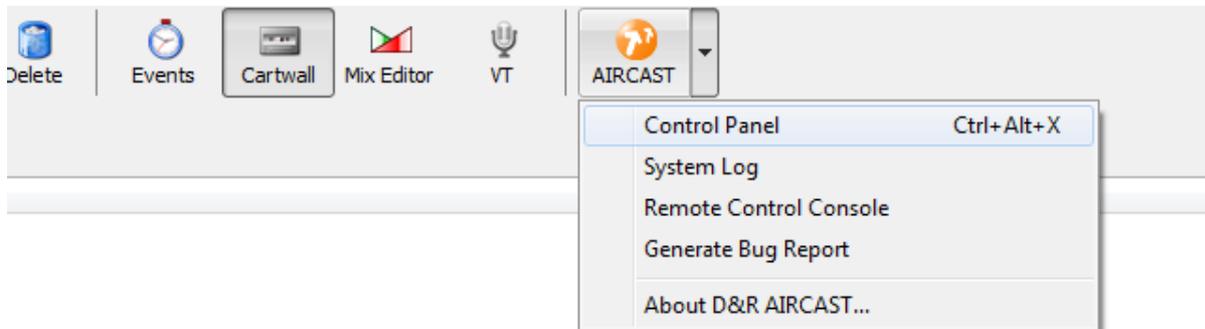

2. Click on **Remote Control** -> **Add..** -> **D&R Airlite**

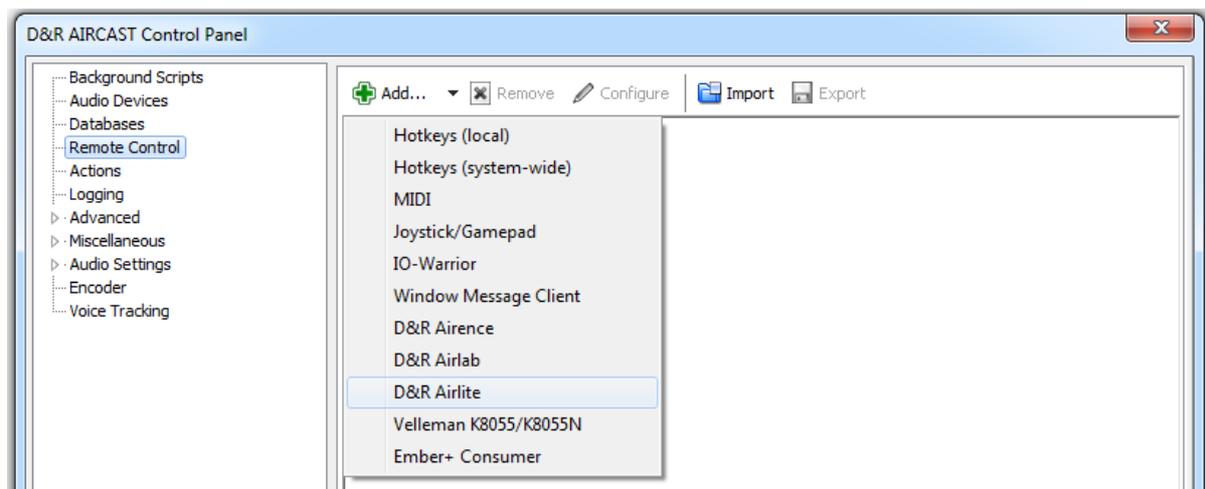

D&R Airlite Configuration


Players

Assignment

In the **Players** tab you can assign Player 1 and Player 2 to one of the physical USB channels of the mixer: USB1, USB2, USB3, USB4 respectively Channel 4, 5, 6, 7.

Options

- **Automatic PFL switch**
 - Opens directly the CUE player window when pressing CUE switch on the mixer.
- **Use PAUSE/STOP**
 - PAUSE/STOP the player with the faderstart

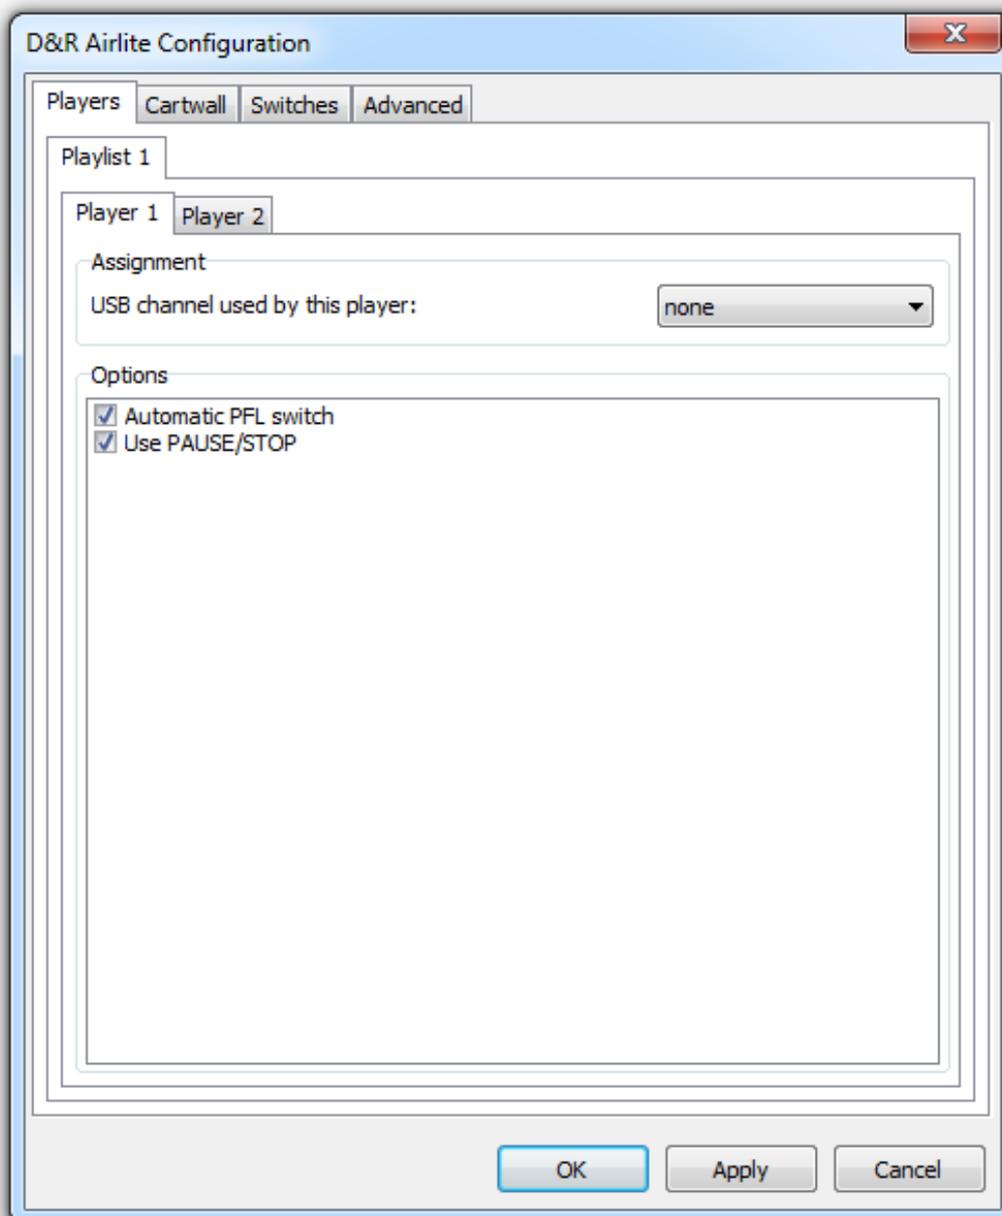


Cartwall

In the **Cartwall** tab you can configure the functionality of the 16 control switches. Switches are arranged in two columns A and B and numbered from top to bottom 1..8.


- **Use control switches for cartwall**
 - The control buttons are assigned directly to the cartwall for start/stop jingles.

In the **Color Settings** you can configure the behaviour of the LED behind the control switch for all separate States. LED's can be red, green or off and blink in slow, normal and fast mode.

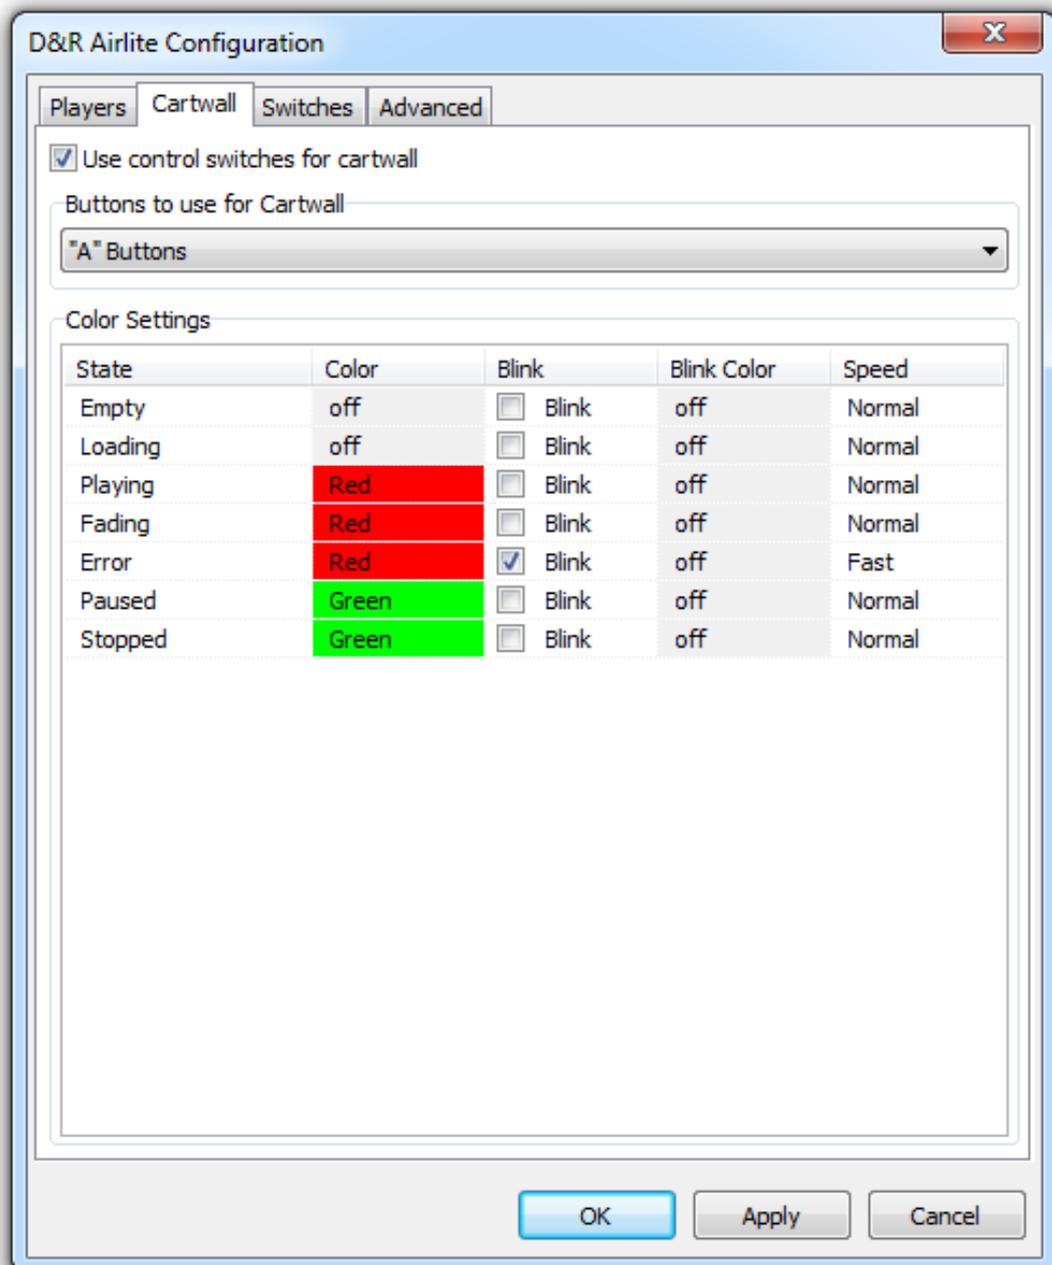

Switches

In the **Switches** tab you can assign any function available in Aircast to one of the 16 control switches on the Airlite. In such a way you can use the control switches as a remote control for Aircast.

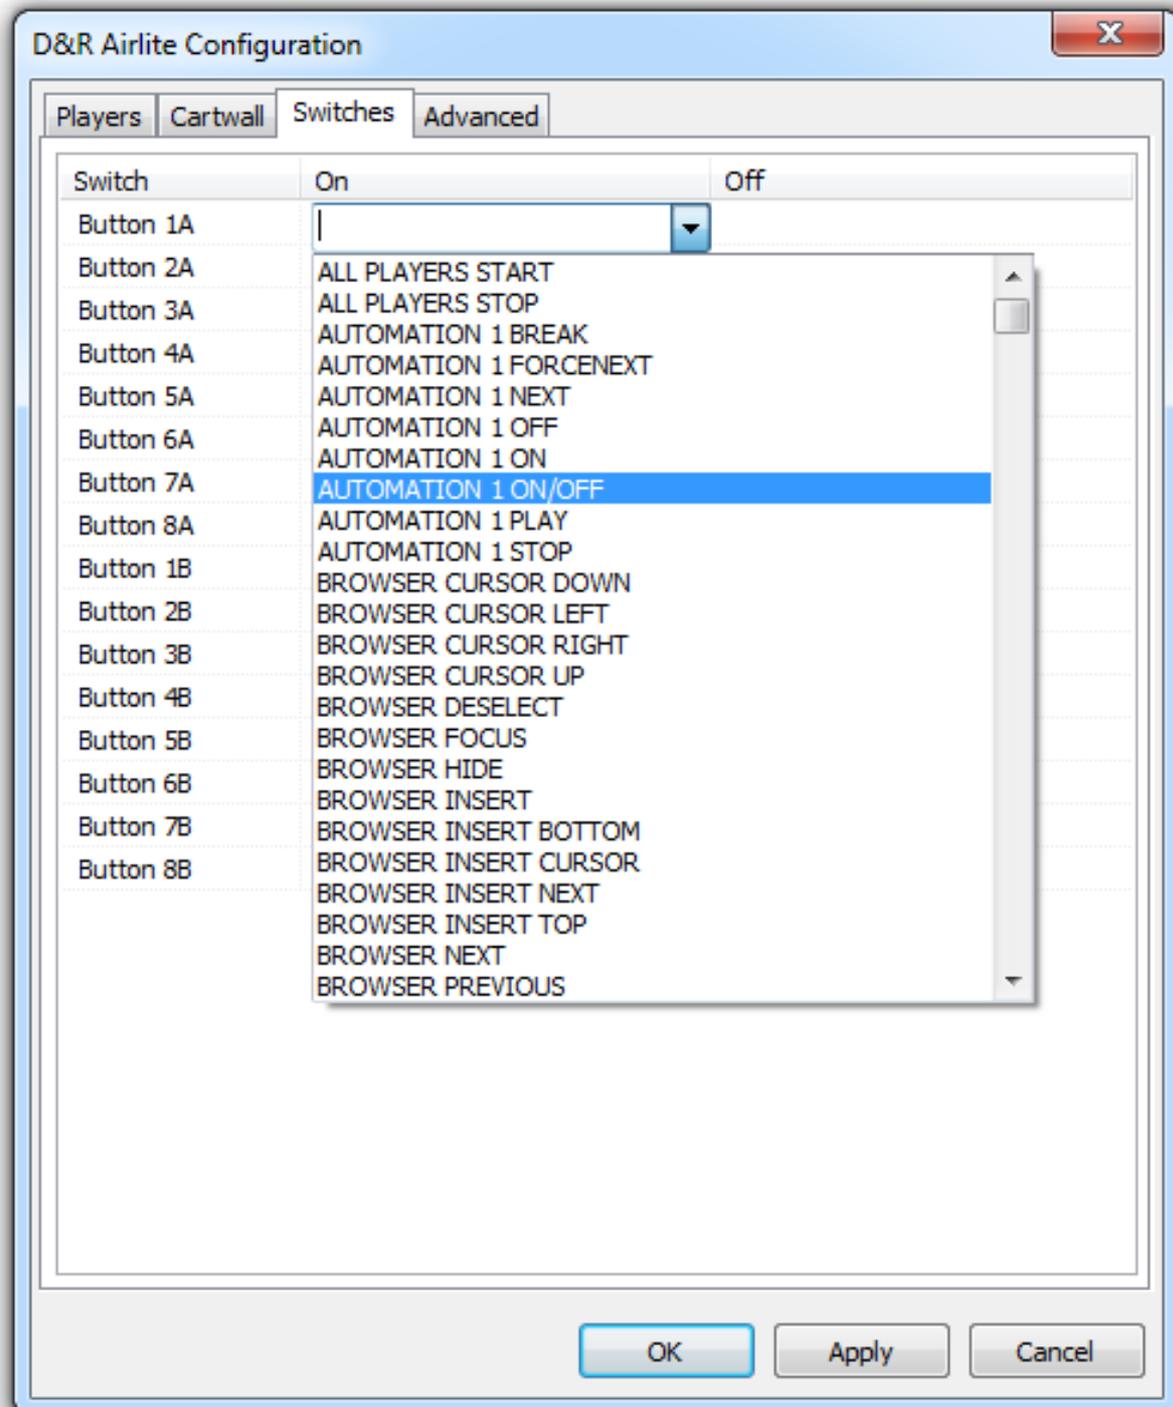

Advanced

The **Advanced** tab shows the communication settings and are pre configured by default.

In order to use other ports , make sure the ports correspond to the ones configured in **Airlite Control**.

