

VOIP Configurations/questions AIRLITE

In your answer regarding hooking up a Hybrid telephone interface to the clean feed on Airlite, does the return signal need to be hooked up to channels 1-3 with the preamps or 4-7 USB channels?

Will a Skype channel #8 be completely independent and operated simultaneously with taking calls from the Hybrid?

- Channel 8 (voip) is assumed to be you telephone channel. The Cleanfeed output contains all channels except for channel 8, and can be used if you want to connect an analog hybrid.
- If you use a software application for setting up phone calls, just use the separate VOIP USB cable for interfacing with the software (Skype in this case).

We are planning to use the Airlite in a talk show setup, primarily with just the radio host and one guest on Skype calling in. Can you give some examples of usage for sourcing USB channels #4-7? What are other radio hosts inputting into these USB channels?

(From Airlite to PC; in other words: recording devices on your PC):

- USB1 – Program buss
- USB2 – Aux Buss
- USB3 – VoiceTrack Buss
- USB4 – AIR In

(From PC to Airlite; in other words: playback devices on your PC):

- USB1 – Channel 4
- USB2 – Channel 5
- USB3 – Channel 6
- USB4 – Channel 7