


REMOTE WIRING FOR AIRMATE

Start / Mic-On Jack			
		Function relais contact	Comment
	Tip	CC (Center Contact)	Max. 24V, 50mA. By jumper selection Pulls or Continue.
	Ring	NO (Normal Open)	
	Sleeve	NC (Normal Close)	

