


How to change USB sample rate in AIRMATE-USB mixers

You can change the bitrate in the tab Advanced in Windows, see below

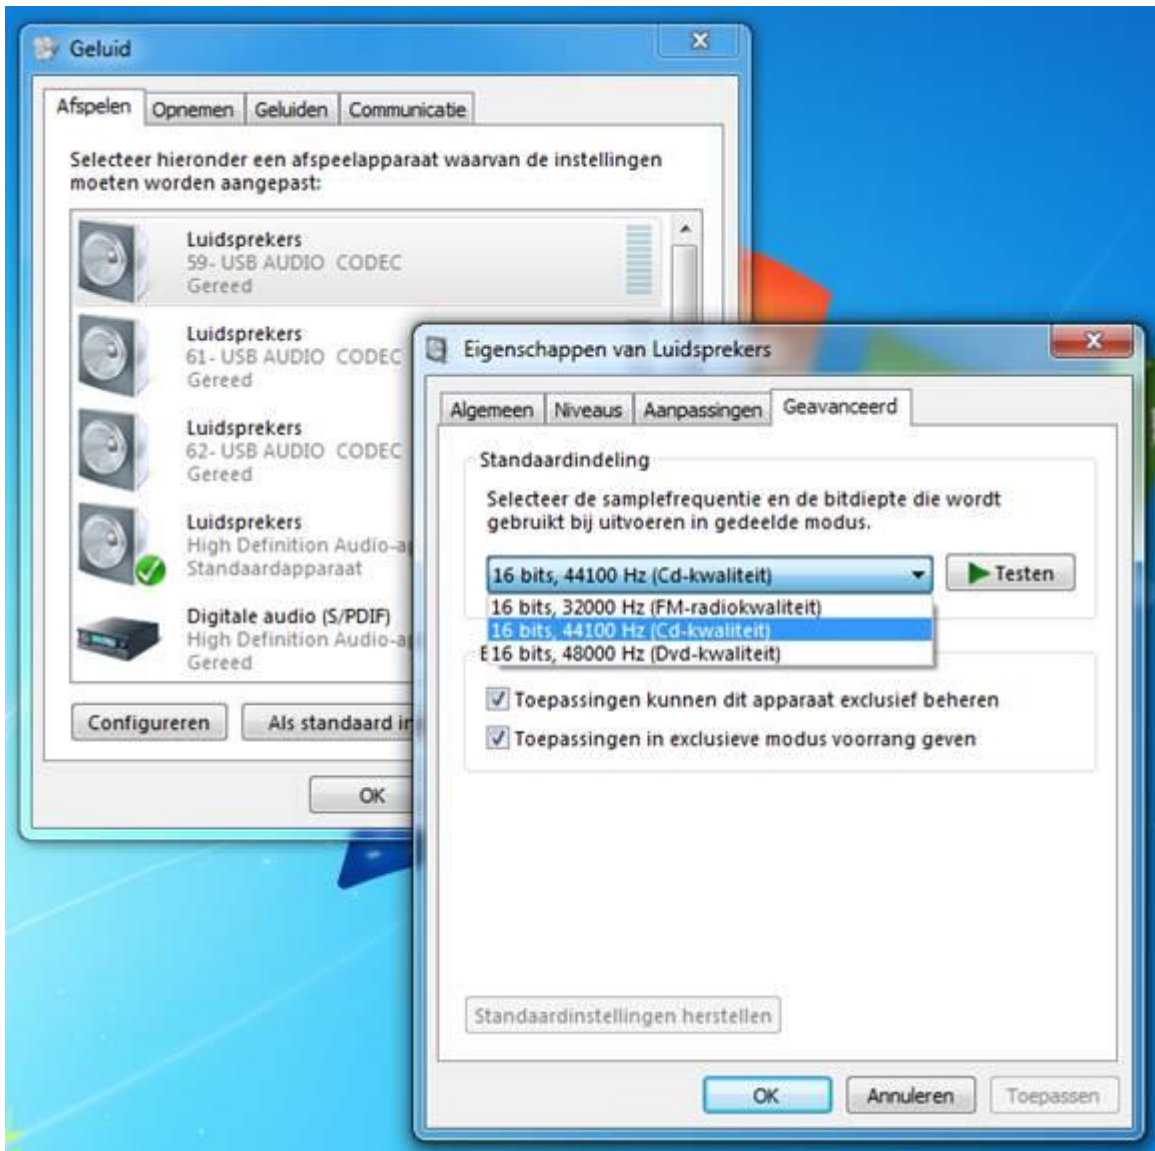

Some extra tips:


If you open the tab recording please check if you the AIRMATE-USB labeled as Line or Microphone.

In case you have an older AIRMATE-USB there might be a CODEC built in that is not recognized by Windows7 as a line input and set to Mix input.

If this is the case the signals are way too loud to be handled by Windows.

A new Codec needs to be installed so windows recognizes these codec's as line inputs.

Op die manier komt het geluid veel te hard binnen in windows. We kunnen de USB kanalen

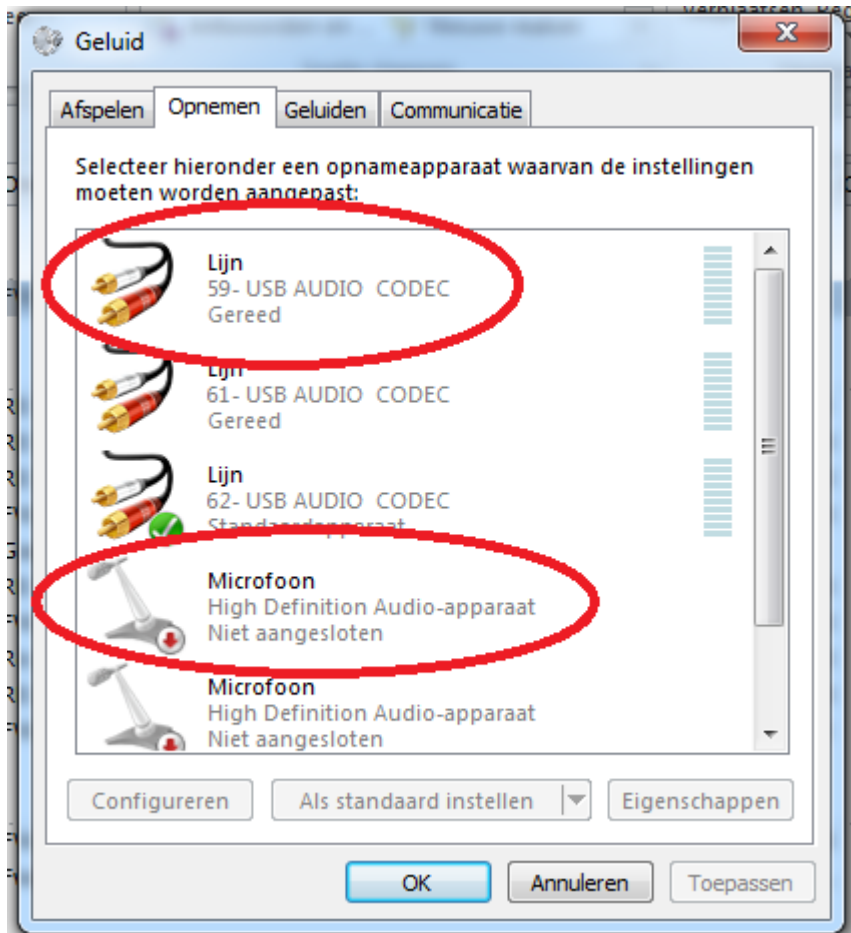

You can check the Chips in your AIRMATE-USB in the following way.

Go to device control and select at the Audio card USB AUDFIO CODEC its specifications

In the hardware ID a "C" needs to be seen, if this is not the case you have an older (not windows7 compatible chip built in) .

