




AIRMATE-USB ON AIR signalling without CRM mute on more than one input module

Default MIC-ON setting

Normally an ON-AIR light is controlled by and connected to the MIC-ON jack in the master section of the AIRMATE-USB. At the same time (when the Self-op switch is active) the Control Room Monitors will be muted.

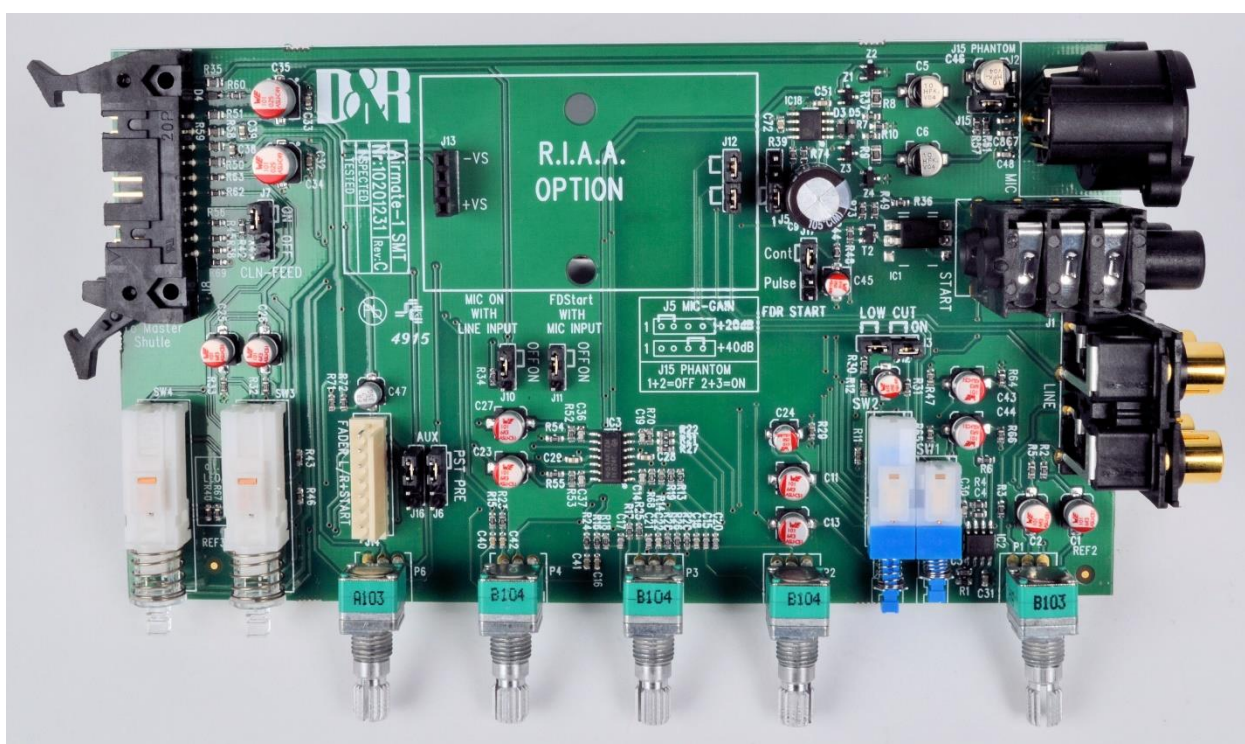

But if you want to activate the ON-AIR light individually per channel, the channel START switch jack can be used for that, it switches between tip and ring of the jack, but only if you set Jumper J11 to ON and Jumper J16 to continuous. If you want that to work for the line input set Jumper J10 to ON

If you want more channels to control one ON-AIR light, all tips and rings of the same jumpered channels can be soldered in parallel so all these channels when the fader is up and the ON switch active, plus the right jumper settings, will activate the ON-AIR light.

D&R Support team

D&R Electronica BV, Rijnkade 15B, 1382GS Weesp-Netherlands, Phone +31 (0)294 418014 mail: mail@d-r.nl

website: www.d-r.nl