



## HOW TWO CALLERS CAN HEAR EACH OTHER IN THE AIRMATE

The Airmate has one Clean-Feed output.

At the Clean-Feed output all channels are active except the channel with the Clean-Feed jumper set to OFF.

If you connect two hybrids to one Clean-Feed output and at both hybrid input channels you set the Clean-Feed jumper OFF, the signal from hybrid-one and two will not be at the Clean-Feed output.

You can solve this problem by using the Aux-buss.

### **Explanation:**

- Set at all channels the Clean-Feed jumper ON, except at the input-channel with Hybrid-One.
- Set at all channels the Aux-Pot open, except at the input-channel with Hybrid-Two.
- Connect input Hybrid-One at the Clean-Feed output.
- Connect input Hybrid-Two at the Aux-Output.

Now Hybrid-One will hear Hybrid-Two and the other channels via the Clean-Feed, and Hybrid-Two will hear Hybrid-One and the other channel via the Aux-buss

TB to Hybrid-One via TB-to-Clean-Feed.

TB to Hybrid-Two via TB-to-Aux

Good luck!