

# AIRLITE REPLACEMENT OF USB CARD

(necessary when switching from Windows to Apple OS)

To be able to access the internal USB card you need to remove the front panel from the frame.

## Please follow below steps

1. Remove all 6 screws from the front panel (3 on the top side and 3 below the faders)
2. Position the Airlite with the back panel connectors towards yourself.
3. Now lift the front panel a little bit and disconnect 4 pcs of 34 pole connectors and 1 pcs of the 10 pole connector from the main board.
4. Now put the front panel upside down on a soft material (to avoid damage)
5. Just above the text AIRENCE-10D ... on the small PCB that is mounted on the main pcb you will see a screw (Torx) that needs to be removed before you can replace this PCB by a modified version that is capable of accepting Apple OS instructions.
6. After you have replaced the PCB do all the above in reversed sequence.
7. It is important to avoid Electrical Static Discharge by touching the front panel first before removing the PCB.



Figure 1 USB pcb

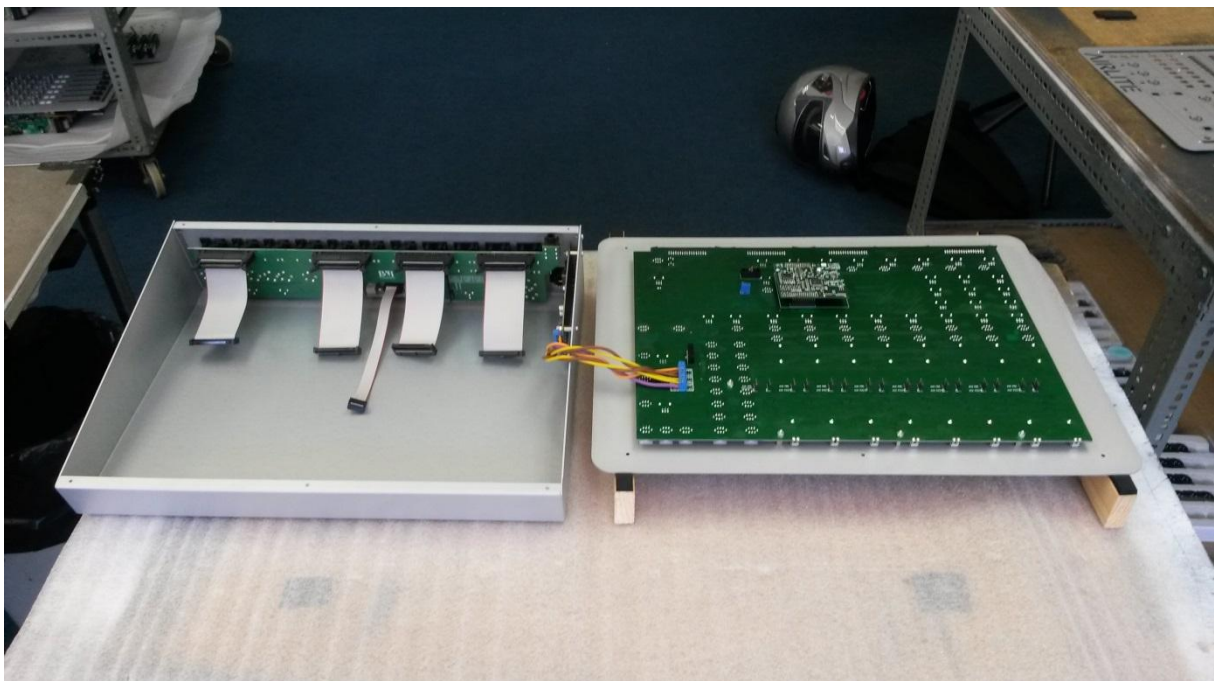


Figure 2 AIRLITE upside down with USB pcb mounted